

Module Type Temperature Controller

For GTE2-2L A Version



Features:

- Optional input signal types.
- With many functions, measured display, control output, alarm output, analog output, RS485 communication, etc.
- Optional many types of PID arithmetic, and with auto-tuning function.
- Using for industrial machinery, machine tools, measuring instruments.
- Economical and easy operation.

National High-tech Enterprise/ National Standard Drafting Unit



Hotline: 400-0760-168

Version code : KKGTE2-2L-A01E-A/0-20211108

The instruction explain instrument settings, connections,name and etc, please read carefully before you use the temperature controller. Please keep it properly for necessary reference.

I. Safe Caution

Warning

- 1) When the failure or abnormal of products lead to a system of major accidents, please set the proper protection circuit in the external.
- 2) Please don't plug in before completing all the wire. Otherwise it may lead to electric shock, fire, fault.
- 3) Not allow to use outside the scope of product specification, otherwise it may lead to fire, fault.
- 4) Not allow to use in the place where is inflammable and explosive gas.
- 5) Do not touch power terminal and other high voltage part when the power on, otherwise you may get an electric-shock.
- 6) Do not remove, repair and modify this product, otherwise it may lead to electric shock, fire, fault.

Caution

- 1) The product should not be used in a nuclear facility and human life associated medical equipment.
- 2) The product may occur radio interference when it used at home. You should take adequate countermeasures.
- 3) The product get an electric shock protection through reinforced insulation. When the product is embedded in the devices and wiring, please subject to the specification of embedded devices.
- 4) In order to prevent surge occurs, when using this product in the place of over 30m indoor wiring and wiring in outdoor, you need to set the proper surge suppression circuitry.
- 5) The product is produced based on mounting on the disk. In order to avoid to touch the wire connectors, please take the necessary measures on the product.
- 6) Be sure to observe the precautions in this manual, otherwise there is a risk of a major injury or accident.
- 7) When wiring, please observe the local regulation.
- 8) To prevent to damage the machine and prevent to machine failure, the product is connected with power lines or large capacity input and output lines and other methods please install proper capacity fuse or other methods of protection circuit.
- 9) Please don't put metal and wire clastic mixed with this product, otherwise it may lead to electric shock, fire, fault.
- 10) Please tighten screw torque according to the rules. If not, it may lead to electric shock and fire.
- 11) In order not to interfere with this products to dissipate heat, please don't plug casing around the cooling vent hole and equipment.
- 12) Please don't connect any unused terminal.
- 13) Please do the cleaning after power off, and use the dry cleaning cloth to wipe away the dirt. Please don't use desiccant, otherwise, it may casue the deformation or discoloration of the product.
- 14) Please don't knock or rub the panel with rigid thing.
- 15) The readers of this manual should have basic knowledge of electrical, control, computer and communications.
- 16) The illustration, example of data and screen in this manual is convenient to understand, instead of guaranteeing the result of the operation.
- 17) In order to use this product with safety for long-term, regular maintenance is necessary. The life of some parts of the equipments are by some restrictions, but the performance of some will change for using many years.
- 18) Without prior notice, the contents of this manual will be change. We hope these is no any loopholes, if you have questions or objections, please contact us.

Caution of Install & Connection

1. Installation

- 1) This product is used in the following environmental standards. (IEC61010-1) [Overvoltage category II, class of pollution 2].

2) This product is used in the following scope: environment, temperature, humidity and environmental conditions. Temperature: 0~50°C; humidity: 45~85%RH; Environment condition: Indoor warranty. The altitude is less than 2000m.

3) Please avoid using in the following places :

The place will be dew for changing temperature; with corrosive gases and flammable gas; with vibration and impact; with water, oil, chemicals, smoke and steam facilities with Dust, salt, metal powder; and with clutter interference, static electric and magnetic fields, noise; where has air conditioning or heating of air blowing directly to the site; where will be illuminated directly by sunlight; where accumulation of heat will happen caused by radiation.

4) On the occasion of the installation, please consider the following before installation.

In order to protect heat saturated, please ensure adequate ventilation space. Please consider connections and environment, and ensure that the products below for more than 50mm space. Please avoid to install over the machine of the calorific value (Such as heaters, transformer, semiconductor operations, the bulk resistance). When the surrounding is more than 50 , please using the force fan or cooling fans. But don't let cold air blowing directly to the product. In order to improve the anti - interference performance and security, please try to stay away from high pressure machines, power machines to install.

Don't install on the same plate with high pressure machine and the product.

The distance should be more than 200mm between the product and power line.

2. Cable caution :

1) Please use specified compensation wire in the place of TC input; Please use insulated TC if the measured device is heated metal.

2) Please use the cable of lesser resistance in the place of RTD input, and the cable (3 wire) must be no resistance difference, but the total length is within 5m.

3) In order to avoid the effect of noise, please put the input signal away from meter cable, power cable, load cable to wiring.

4) In order to reduce the power cables and the load power cables on the effect of this product, please use noise filter in the place where easy to effect.

You must install it on the grounding of the disk if you use the noise filter, and make the wiring to be shortest between noise filter output side and power connectors. Don't install fuse and switch on the wiring of noise filter output side, otherwise it will reduce the effect of noise filter.

5) It takes 5s from input power to output. If there is a place with interlocking actions circuit signal, please use timer relay.

6) Please use twisted pair with a shield for analog output line, can also connect the common-mode coil to the front-end of the signal receiving device to suppress line interference if necessary, to ensure the reliability of signal.

7) Please use twisted pair with a shield for remote RS485 communication cable, and deal with the shield on the host side earth, to ensure the reliability of signal.

8) This product don't have the fuse; please set according to rated voltage 250V, rated current 1A if you need; fuse type: relay fuse.

9) Please use suitable slotted screwdriver and wire.

Terminal distance: 5.0mm. Screwdriver size: 0.6X3.5, length of slotted screwdriver >130mm. Recommended tightening torque: 0.5N.m.

Proper cables: 0.25 ~ 1.65mm single cable/multiple core cable

10) Please don't put the Crimp terminal or bare wire part contact with adjacent connector.

III. Ordering Information

GTE2□-R C20-R-A- 1 A: Version

- 2 T: TC input R: RTD input X : mA/V input
- 3 20: Dual input without RS485 28: Dual input with RS485
- 4 C: 2 alarm output
- 5 R: Relay output S: SSR output D: DC 4-20mA (can be changed to analog output through ACT menu)
- 6 Blank: AC/DC 100 ~ 240V F: AC/DC 24V (can be ordered)
- 7 2: 22.5WX110HX115L
- 8 GTE series module type temperature controller

III. Ordering Information

Model	Input	OUT1 (CH1)	OUT1 (CH2)	AL1/OUT2 (CH1)	AL1/OUT2 (CH2)	RS485
GTE2□-RC28-T	TC	RELAY	RELAY	●	●	●
GTE2□-SC28-T	TC	SSR	SSR	●	●	●
GTE2□-DC28-T	TC	4-20mA	4-20mA	●	●	●
GTE2□-RC28-R	RTD	RELAY	RELAY	●	●	●
GTE2□-SC28-R	RTD	SSR	SSR	●	●	●
GTE2□-DC28-R	RTD	4-20mA	4-20mA	●	●	●
GTE2□-RC20-T	TC	RELAY	RELAY	●	●	NO
GTE2□-SC20-T	TC	SSR	SSR	●	●	NO
GTE2□-DC20-T	TC	4-20mA	4-20mA	●	●	NO
GTE2□-RC20-R	RTD	RELAY	RELAY	●	●	NO
GTE2□-SC20-R	RTD	SSR	SSR	●	●	NO
GTE2□-DC20-R	RTD	4-20mA	4-20mA	●	●	NO

● : Standard configuration function

IV. Specifications

1. Electrical parameters:


Sample rate	2 times per second
Relay capacity	AC 250V /1A lifespan of rated load > 100,000 times (Resistive load)
Power supply	AC/DC 100 ~ 240V (85-265V) or AC/DC 24V
Power consumption	< 6VA
Environment	Temperature of indoor : 0 ~ 50°C no condensation, Humidity : < 85%RH , altitude < 2000m
Storage environment	-10 ~ 60°C, no condensation
SSR output	DC 24V pulse level, load < 30mA
Current output	DC 4 ~ 20mA load < 500Ω , temperature drift 250PPM
Communication port	RS485 port, Modbus-RTU protocol, max input 30 units
Insulation impedance	Input, output, power cabinet > 20MΩ
ESD	IEC/EN61000-4-2 Contact ±4KV /Air ±8KV perf. CriGTEria B
Pulse triap anti-interference	IEC/EN61000-4-4 ±2KV perf. CriGTEria B
Surge immunity	IEC/EN61000-4-5 ±2KV perf. CriGTEria B
Voltage drop & short interruption immunity	IEC/EN61000-4-29 0% ~ 70% perf. CriGTEria B
Dielectric strength	Signal input & output & power 1500VAC 1min, below 60V Low voltage circuit between DC500V, 1min
Total weight	About 400g
Shell material	PA66-FR (Flame Class UL94V-0)
Panel material	PVC film and PEM silicone key
Power-off data protection	10 years , times of writing: 1 million times
Safety Standard	IEC61010-1 Overvoltage category II , pollution level 2 , level II (Enhanced insulation)

2. Measured signal specifications :


Input type	Symbol	Measuring range	Resolution	Accuracy	Input impedance/auxiliary current	Communication parameter code
K	℄	-50 ~ 1200	1°C	0.5%F.S±3digits	> 500kΩ	0
J	℄	0 ~ 1200	1°C	0.5%F.S±3digits	> 500kΩ	1
E	℄	0 ~ 850	1°C	0.5%F.S±3digits	> 500kΩ	2
T	℄	-50 ~ 400	1°C	0.5%F.S±3°C	> 500kΩ	3
B	℄	250 ~ 1800	2°C	1%F.S±2°C	> 500kΩ	4
R	℄	-10 ~ 1700	1°C	1%F.S±2°C	> 500kΩ	5
S	℄	-10 ~ 1600	1°C	1%F.S±2°C	> 500kΩ	6
N	℄	-50 ~ 1200	1°C	0.5%F.S±1°C	> 500kΩ	7
PT100	℄	-200 ~ 600	0.2°C	0.5%F.S±0.3°C	0.2mA	8
JPT100	℄	-200 ~ 500	0.2°C	0.5%F.S±0.3°C	0.2mA	9
CU50	℄	-50 ~ 150	0.2°C	0.5%F.S±3°C	0.2mA	10
CU100	℄	-50 ~ 150	0.2°C	0.5%F.S±1°C	0.2mA	11
0 ~ 50mV	℄	-1999 ~ 9999	12bit	0.5%F.S±3digits	> 500kΩ	12
0 ~ 400V	℄	-1999 ~ 9999	12bit	0.5%F.S±3digits	0.2mA	13
*4 ~ 20mA	℄	-1999 ~ 9999	12bit	0.5%F.S±3digits	100Ω	14
*0 ~ 10V	℄	-1999 ~ 9999	12bit	0.5%F.S±3digits	>1MΩ	15

* Please note when you choose the model


3. Isolation diagram:

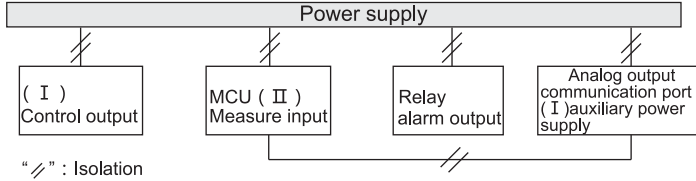

V. Dimension and installation size

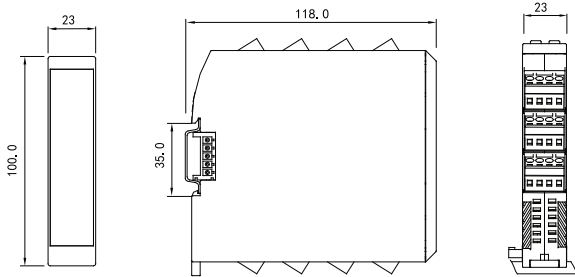


VI. Connection

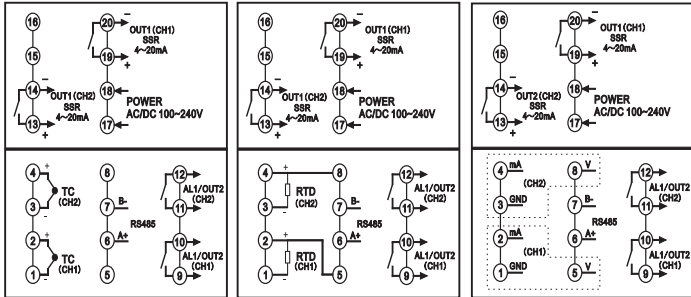


Note: If there is any change, please subject to the drawing on the meter

VII. Name of universal panel

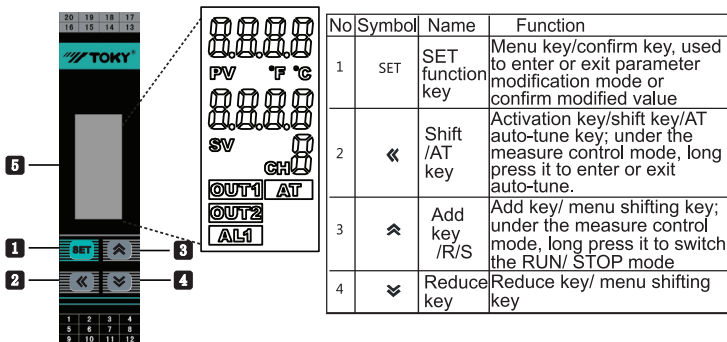

VIII. Operation process and menu illustration

1. Operation process & method

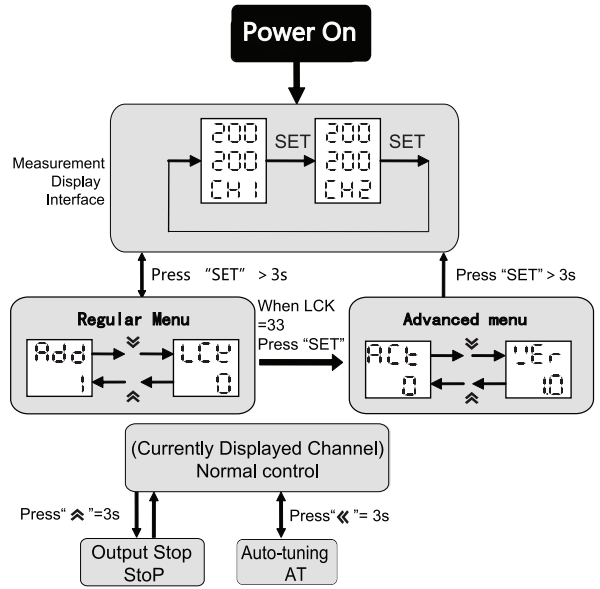

Operation:

- After power on and under normal measure control mode, short press “SET” key to switch the channel, the channel number is displayed in the CH indicator window; and then under corresponding channel mode, long press “SET” key more than 3s to enter the corresponding menu parameters checking mode.
- In the menu checking mode, press “SET” key to check the menu parameters circularly.
- In the menu checking mode, short press “◀” can flash the current menu parameters to enter the parameter modify mode, and every short press can move one position to the left, in this cycle.
- In the parameter modifying mode, press “⏏” or “▶” key once to add or reduce one of flashing data.
- In the parameter modifying mode, after the modification, press “SET” to save the modified parameter, and exit to menu checking mode.
- In the normal measure control mode, long press “◀” more than 3s to enter auto-tuning state.
- In the normal measure control mode, long press “⏏” key more than 3s to enter or exit monitoring mode, RUN/STOP model. Under stop mode, SV window displays “STOP”.

2. Menu Illustration

Hide parameters according to model

No	Symbol	Name	Illustration	Setting range	Factory setting
1	PV	Measuring display value, it will flash or display LLLL/HHHH when the value overflow measure range. Unit: C / F or no unit	Refer to measured signal table		NO
2	SV	Control item setting value		FL ~ FH	200
3	℄	LCK	Lock function; 0001: SV value can not be changed; 0010: menu setting value can be read only; 0033: advanced menu can be accessed; 0123: menu restore factory setting	0 ~ 9999	0
4	℄	ADD	Communication ADD	1 ~ 247	1
5	℄	BAD	RS485 communication baud rate 4.8 (0) : 4800; 9.6 (1) : 9600 19.2 (2) : 19200	4.8 ~ 19.2	9.6
6	℄	PRTY	Communication parity check setting, 0 NO 1 : ODD 2 : EVEN	0 ~ 2	NO
7	℄	DATC	Communication data transport sequence 000; 1st bit function reserved; 2nd bit is byte sequence exchange; 3rd bit function reserved.		0
8	℄	AL1	1st alarm value, note: the minus is dealt as absolute value when it is as a deviation value.	FL ~ FH	5
9	℄	HY1	1st alarm hysteresis	0 ~ 1000	1
10	℄	AD1	1st alarm mode, note: when AL1 is used as OUT2 (cooling output), should set the value AD1=0 (close alarm function). When AD1>6, 2nd alarm function is invalid. Pls refer to“(1) Alarm parameters & output logic diagram”	0 ~ 6	3
11	℄	OT	Control mode, 0:ON/OFF heating control, 1: PID heating control 2: ON/OFF cooling control 3:PID heating & cooling control (cooling control OUT2 will output through AL1 relay). 4: Over temperature cooling output 5. PID cooling	0 ~ 5	1
12	℄	P	Proportional band, the smaller the value is, the faster the system responds, otherwise, it is slower. When P=0, no PID control, unit same as PV	0 ~ 9999	30
13	℄	I	Integral time, the smaller the value is, the stronger the integral action is, otherwise, it is weaker. When I=0, no integral action, unit: s.	0 ~ 9999	120

No	Symbol	Name	Illustration	Setting range	Factory setting
14	∫	D	Integral time, the smaller the value is, the stronger the integral action is, otherwise, it is weaker. When I=0, no integral action, unit: s.	0 ~ 9999	30
15	A-M	A-M	Auto-manual control switch , AUTO(0): auto control only; MAN(1): manual control only;	AUTO~AM	AUTO
16	CP	CP	OUT1 control cycle, 1: SSR control output, 4-200: relay control output. Unit:s	1 ~ 200	20
17	CP1	CP1	OUT2 relay output cycle. Unit: S	4 ~ 200	20
18	PC	PC	OUT2 cooling proportionality coefficient, the higher of value,the stronger of cooling	1.0 ~ 100.0	10.0
19	DB	DB	ON/OFF control hysteresis(positive and negative numbers work the same); when OT=3, it is the dead zone for cooling control (positive and negative numbers work differently);after change the INP setting, please change this parameter according to the decimal point position.	0 ~ 1000	0
20	INP	INP	Optional input signal, refer to input signal parameters table. Note: after selecting the signal, pls set below relevant parameters: SV, AL1 , HY1 ,AL2 , HY2 , P , OVS , DB.	Refer to "2" measured signal specification	K /PT100 /mA
21	PS	PS	Amend value, display value= actual measured value + amend value	FL ~ FH	0
22	ACT	ACT	Control execution mode, 0 : Relay output 1:SSR output control2: 4 ~ 20mA output, please set according to the selected instrument configuration 3: 4 ~ 20mA transmission output	0 ~ 3	0/2
23	AE1	AE1	1st alarm extensions function, refer to "(2) alarm extension function table" .	0 ~ 5	5
24	DP	DP	Decimal point setting is effective under the linear signal input	0 ~ 3	0
25	DTR	DTR	PV fuzzy tracking value, properly set this value on some occasions, it can get a more stable control display value, this value is unrelated with actual measured value. Note: after setting this value, when alarm setting value is equal to SV setting value, alarm output operation is subject to actual measured value. Set as 0 to close this function. The temperature input unit: Fahrenheit or Celsius. The linear signal input unit: Engineering Digits	0.0 ~ 2.0 0 ~ 20	1.0
26	FL	FL	Measure range low limit, the setting value must be less than measure range high limit	Refer to measured signal parameter table	
27	FH	FH	Measure range high limit, the setting value must be more than measure range low limit.	Refer to measured signal parameter table	
28	BRL	BRL	Analog range low limit, note: when this value is higher than analog range high limit, it is reverse analog output.	FL ~ FH	
29	BRH	BRH	Analog range high limit, note: when this value is lower than analog range low limit, it is reverse analog output.	FL ~ FH	
30	OLL	OLL	Output low limit, limit the output low limit current amplitude. Setting value must be less than high limit setting	-5.0 ~ 100.0	0.0
31	OLH	OLH	Output high limit, limit the output high limit current amplitude. Setting value must be greater than low limit setting	0.0 ~ 105.0	100.0
32	FT	FT	Filter coefficient, the higher of value, the stronger of filter function	0 ~ 255	10
33	PT	PT	Compressor start delay time, unit: s	0 ~ 9999	0
34	PDC	PDC	PID algorithm option: 0(FUZ): Advanced fuzzy PID arithmetic; 1(STD): normal PID arithmetic	FUZ/STD	FUZ
35	UNIT	UNIT	Temperature unit setting C: Celsius F: Fahrenheit, note: this unit setting is only for temperature measurement signals	(25)°C (26)°F	(25)°C
36	PRS	PRS	Setting parameter reserve position: 0 (EEP): EEPROM with power failure protection; 1(RAM): RAM without power failure protection.	EEP/RAM	EEP
37	RSS	RSS	RUN/STOP reserve position:) 0 (EEP): EEPROM with power failure protection; 1(RAM): RAM without power failure protection.	EEP/RAM	EEP
38	DN	DN	Display the number of channels, indicating the number of measurement channels actually used by the instrument	1 ~ 2	2
39	DNS	DNS	Display the starting channel number, which is used to indicate number of channel 1 in multi-machine application. For example: when DNS=3, CH3~CH4 represent 1~2 channels respectively	1 ~ 14	1
40	DNT	DNT	Channel cycle display time, 0 means cancel automatic cycle display	0 ~ 99	4
41	BLT	BLT	Backlight delay setting, set to 0 when the backlight is always on, otherwise the backlight will be off after the delay	0 ~ 10	5
42	VER	VER	Software version.	--	--

(1) Alarm parameters and output logic diagram:

Symbol description: "☆" means HY, "▲" means alarm value, "△" means SV value

No.	Alarm mode	Alarm output (AL1&AL2 are independent from each Image:the hatched section means the alarm action
1	High limit absolute value alarm	
2	Low limit absolute value alarm	
3	High limit deviation value alarm	
4	Low limit deviation value alarm	
5	High/low limit deviation value alarm	
6	High/low limit interval value alarm	

※When the alarm value with deviation alarm is set as a negative number, it will be dealt as an absolute value.

(2) Alarm extension function table

AE1/AE2 value	Alarm handling method when it displays HHHH/LLLL	Remark
Power on, alarm does not inhibit	0 The alarm remains the state 1 second before it displays HHHH/LLLL	As long as the alarm condition is met, alarm will output.
	1 Forced alarm output	
	2 Forced alarm close	
Power on, alarm inhibit	3 The alarm remains the state 1 second before it displays HHHH/LLLL	Before the PV value reaches the SV for the first time, the alarm will not output
	4 Forced alarm output	
	5 Forced alarm close	

IX. Key function operation

1. Monitoring mode operation (RUN/STOP)

- Under the measure mode, long press "▲" to enter the monitoring mode, and it will display "STOP" on the SV window. Long press "▲" to exit.
- It can modify SV value and switch operation mode even displaying STP.
- Under the monitoring mode, main control output will stop or set min output except alarm output and analog output.

2. PID parameter identification and auto-tune operation:

- The factory default PID parameters usually does not apply to usage occasion; please use auto-tuning function to get a suitable PID parameter.
- The meter will enter control output since power on, so please set the monitoring mode to avoid any influence on the auto-tune effect, or switch off the power of control output load. No matter how it operates, should guarantee the set value greater than the current measured value, and the bigger the drop is, the better it will be.
- In order to avoid the influence caused by alarm interlocking output, please set the proper alarm value in advance, or exclude the alarm influence.
- Set PID type and SV value; the factory default setting is fuzzy PID.
- Set as PID control, if there is OLL & OLH output limiting, please set the output to a proper range; factory default setting is OLL=0%, OLH=100%.
- Under the condition that PV value is at normal room temperature, please exit monitoring mode or power on the load, and long press "◀" to enter auto-tune mode, then, AT indicator is on.
- Auto-tune will take some time, in order not to affect auto-tune result, please don't modify the parameters or power-off.
- When AT light goes out, it automatically exits auto-tune mode, PID parameters will be updated automatically, at that time, it will auto control exactly.
- It will stop the auto-tune if long press "◀" key, measure beyond the scope, display abnormally, switch to "STOP" mode, or power-off in the process of auto-tune.
- Note: In the occasions with output limiting operation, sometimes, even if the auto-tune is carried out, the best PID parameters still cannot be obtained.
- Experienced users can set a proper PID parameter according to their experience.

3. PID & Cooling control operation

- PID control acts on main control output OUT1, cooling control acts on OUT2.
- AL1 alarm and OUT2 are multiplex function, when using the cooling control, please set AD1 as 0; the 1st alarm function will not work after setting.
- Please set the control mode OT as 3.
- Please set the cooling start hysteresis DB to a value greater than 5, to ensure the cooling would not affect the PID control.
- Please change the cooling control cycle CP1 to a proper value, and change the cooling proportionality coefficient to a proper value.
- When PV value > SV+DB value, the cooling control start to effect; the bigger value of PV, the longer output time of OUT2

X. Methods of simple fault

Display	Checking method
LLLL/HHHH	Check the wire connection, FH and FL value, working environment temperature and whether input signal is selected correctly.

XI. Communication protocol

Meter use Modbus RTU to do RS485 half-duplex communication. Reading function code 0x03 , writing function code 0x10 / 0x06. The meter use 16digits CRC to check and will not feedback any information of checked error.

Data frame format:

Start bit	Data bit	Stop bit	Check bit
1	8	1	Setting in Menu PRTY

Handling of abnormal communication:

If there is abnormal response, put 1 on the highest bit of function code. For example: Host request function code is 0x03, and the response function code from guest should be 0x83.

Error code:

- 0x01—Illegal function: the function code sent from host is not support by meter.
- 0x02—Illegal address: the register address designated by host beyond the address range of meter.
- 0x03—Illegal data: the writing data sent from host beyond the writing range of meter

Communication cycle:

Communication cycle is the time from host request to client back to data:
 communication cycle=time of request+time of guest response+time of response delay+time of response returning. Take 9600 baud rate as example: The communication cycle of single measure data is not less than 250ms.

1、 Read register

For example:Host reads integer SV(set value 200)

The ADD code of SV is 0x2000 , because SV is integer(2 dyte),seizes 1 data register.The memory code of decimal integer 200 is 0x00C8

Note:It should read DP value or ensure DP value in first to ensure the decimal point when reading data,and need to transform the reading data to get the actual value. Conversely,it should transform the data to corresponding ratio before writing the data in meter.

Host request (Read multi-register)							
Meter ADD	Function code	Start ADD High bit	Start ADD Low bit	Data byte Length high bit	Data byte Length low bit	※CRC code low bit	※CRC code high bit
0x01	0x03	0x20	0x0C	0x00	0x01	0x4F	0xC9

Guest normal answer(Read multi-register)						
Meter ADD	Function code	Data byte number	Data high bit	Data low bit	※CRC code low bit	※CRC code high bit
0x01	0x03	0x02	0x00	0xF4	0xB9	0xD2

Function code abnormal answer: For example: host request ADD is 0x2011)

Guest abnormal answer(Read multi-register)				
Meter ADD	Function code	Error code	※CRC code low bit	※CRC code high bit
0x01	0x83	0x02	0xC0	0xF1

2、 Write multi-register

For example:Host write SV with 0x10 function setting value 200

ADD code of SV is 0x200C,because SV is integer(2 dyte),seizes 1 data register. The hexadecimal memory code of decimal integer 200 is 0x00C8

Host request (write multi-register)										
Meter ADD	Function code	Start ADD High bit	Start ADD Low bit	Data byte Length high bit	Data byte Length low bit	Data byte Length	Data high bit	Data low bit	※CRC code low bit	※CRC code high bit
0x01	0x10	0x20	0x0C	0x00	0x01	0x02	0x00	0xC8	0x86	0xC8

Guest normal answer (write multi-register)							
Meter ADD	Function code	Start ADD High bit	Start ADD Low bit	Data byte Length high bit	Data byte Length low bit	※CRC code low bit	※CRC code high bit
0x01	0x10	0x20	0x0C	0x00	0x01	0xCA	0x0A

Host write SV (setting value 200)

Host request (write single-register)							
Meter ADD	Function code	ADD High bit	ADD Low bit	Data high bit	Data low bit	※CRC code low bit	※CRC code high bit
0x01	0x06	0x20	0x0C	0x00	0xC8	0x43	0x9F

Guest normal answer (write single-register)							
Meter ADD	Function code	ADD High bit	ADD Low bit	Data high bit	Data low bit	※CRC code low bit	※CRC code high bit
0x01	0x06	0x20	0x0C	0x01	0xC8	0x43	0x9F

Data location error response: (For example:Host request the ADD index is 0x2510)

Guest abnormal answer (write multi-register)				
Meter ADD	Function code	Error code	※CRC code low bit	※CRC code high bit
0x01	0x90	0x03	0x0C	0x01

Address Mapping Table of Meter Parameters

No.	Add (Register NO①)	Variables Name	Variables Description	Register	R/W	Remark
1	0x2000(48193)	PV1	CH1 Measure value	1	R	Note②
2	0x2001(48194)	PV2	CH2 Measure value	1	R	
3	0x2004(48197)	STA1	CH1 State value	1	R	
4	0x2005(48198)	STA2	CH2 State value	1	R	
5	0x2008(48201)	MV1	CH1PID Output value	1	R/W	
6	0x2009(48202)	MV2	CH2PID Output value	1	R/W	
7	0x200C(48205)	SV1	CH1 Set value	1	R/W	
8	0x200D(48206)	SV2	CH2 Set value	1	R/W	
9	0x2010(48209)	RSA1	CH1 Switch	1	R/W	
10	0x2011(48210)	RSA2	CH2 Switch	1	R/W	
Address reservation not listed						
11	0x2100(48449)	INP1	CH1 Input Type	1	R/W	
12	0x2101(48450)	INP2	CH2 Input Type	1	R/W	
13	0x2104(48453)	FL1	CH1 rang low limit	1	R/W	
14	0x2105(48454)	FL2	CH2 rang low limit	1	R/W	
15	0x2108(48457)	FH1	CH1 rang high limit	1	R/W	
16	0x2109(48458)	FH2	CH2 rang high limit	1	R/W	
17	0x210C(48461)	DP1	CH1 Decimal point	1	R/W	
18	0x210D(48462)	DP2	CH2Decimal point	1	R/W	
19	0x2110(48465)	PS1	CH1 Translation correct value	1	R/W	
20	0x2111(48466)	PS2	CH2 Translation correct value	1	R/W	
21	0x2114(48469)	FT1	CH1 Filter constants	1	R/W	

22	0x2115(48470)	FT2	CH2 Filter constants	1	R/W	
23	0x2118(48473)	DTR1	CH1 Dispaly fuzzy tracking value	1	R/W	
24	0x2119(48474)	DTR2	CH2 Dispaly fuzzy tracking value	1	R/W	
25	0x211C(48477)	BRL1	CH1 Analog output low limit	1	R/W	
26	0x211D(48478)	BRL2	CH2 Analog output low limit	1	R/W	
27	0x2120(48481)	BRH1	CH1 Analog output high limit	1	R/W	
28	0x2121(48482)	BRH2	CH2 Analog output high limit	1	R/W	
29	0x2124(48485)	OLL1	CH1 Control output low limit	1	R/W	
30	0x2125(48486)	OLL2	CH2 Control output low limit	1	R/W	
31	0x2128(48489)	OLH1	CH1 Control output high limit	1	R/W	
32	0x2129(48490)	OLH2	CH2 Control output high limit	1	R/W	
33	0x212C(48493)	UNIT1	CH1 Unit display	1	R/W	
34	0x212D(48494)	UNIT2	CH2 Unit display	1	R/W	
35	0x2130(48497)	PRS1	CH1 Setting parameter reserve position	1	R/W	
36	0x2131(48498)	PRS2	CH2 Setting parameter reserve position	1	R/W	
37	0x2134(48501)	RSS1	CH1 RUN/STOP Reserve Position	1	R/W	
38	0x2135(48502)	RSS2	CH2 RUN/STOP Reserve Position	1	R/W	
39	0x2138(48505)	DN	Display the number of channels	1	R/W	
40	0x2139(48506)	DNS	Display the starting channel number	1	R/W	
41	0x213A(48507)	DNT	Channel cycle display time	1	R/W	
42	0x213B(48508)	BLT	Backlight delay time	1	R/W	
Address reservation not listed						
43	0x2200(48705)	AL11	CH1 Alarm value	1	R/W	
44	0x2201(48706)	AL12	CH2 Alarm value	1	R/W	
45	0x2204(48709)	AD11	CH1 Alarm type	1	R/W	
46	0x2205(48710)	AD12	CH2 Alarm type	1	R/W	
47	0x2208(48713)	HY11	CH1 Alarm hysteresis	1	R/W	
48	0x2209(48714)	HY12	CH2 Alarm hysteresis	1	R/W	
49	0x220C(48717)	AE11	CH1 Alarm extended mode	1	R/W	
50	0x220D(48718)	AE12	CH2 Alarm extended mode	1	R/W	
Address reservation not listed						
51	0x2300(48961)	OT1	CH1 Control type	1	R/W	
52	0x2301(48962)	OT2	CH2 Control type	1	R/W	
53	0x2304(48965)	P1	CH1 Proportional coefficient	1	R/W	
54	0x2305(48966)	P2	CH2 Proportional coefficient	1	R/W	
55	0x2308(48969)	I1	CH1 Integral time	1	R/W	
56	0x2309(48970)	I2	CH2 Integral time	1	R/W	
57	0x230C(48973)	D1	CH1 Differential time	1	R/W	
58	0x230D(48974)	D2	CH2 Differential time	1	R/W	
59	0x2310(48977)	CP1	CH1 Control cycle	1	R/W	
60	0x2311(48978)	CP2	CH2 Control cycle	1	R/W	
61	0x2314(48981)	DB1	CH1 Heat & Cool control dead zone	1	R/W	
62	0x2315(48982)	DB2	CH2 Heat & Cool control dead zone	1	R/W	
63	0x2318(48985)	AM1	CH1 Auto-Manual switch	1	R/W	
64	0x2319(48986)	AM2	CH2 Auto-Manual switch	1	R/W	
65	0x231C(48989)	CP11	CH1 Cooling control cycle	1	R/W	
66	0x231D(48990)	CP12	CH2 Cooling control cycle	1	R/W	
67	0x2320(48993)	PC1	CH1 Cooling Proportional coefficient	1	R/W	
68	0x2321(48994)	PC2	CH2 Cooling Proportional coefficient	1	R/W	
69	0x2324(48997)	ACT1	CH1 Output type	1	R/W	
70	0x2325(48998)	ACT2	CH2 Output type	1	R/W	
71	0x2328(49001)	PT1	CH1 Cooling relay time	1	R/W	
72	0x2329(49002)	PT2	CH2 Cooling relay time	1	R/W	
73	0x232C(49005)	PDC1	CH1 PID Type	1	R/W	
74	0x232D(49006)	PDC2	CH2 PID Type	1	R/W	
Address reservation not listed						
75	0x2500(49473)	ADD	Communication address	1	R/W	
76	0x2501(49474)	BAD	Communication baud rate	1	R	
77	0x2502(49475)	PRTY	Parity Check	1	R	
78	0x2503(49476)	DATC	Data transmission sequence	1	R	
79	0x2504(49477)	LCK	Lock key	1	R	
80	0x2505(49478)	NAME	Meter name	1	R	

R : Read only ; R/W : Read & write

Note①: The register number is the address converted to decimal plus 1 and then the register identification code 4 is added in front; for example: the register number of the data address 0x2000 is 8192 + 1 = 8193 and then 4 is added in front, that is, the register number 48193; Related applications can be seen, such as Siemens S7-200 PLC.

Note ②: Measurement status indication. When the data bit is 1, it means execution, and when it is 0, it means no execution.

D7	D6	D5	D4	D3	D2	D1	D0
---	HHHH	LLLL	---	---	AL1	OUT2	OUT1

Note③: DTC communication data transmission sequence and response delay description

DTC :
 Reserve
 Byte transfer order: when it is 0, 1, 2, and when it is 1, 2, 1

```

    Reserve
    ※ 16-bit CRC check code to get C program
    unsigned int Get_CRC(uchar *pBuf, uchar num)
    {
        unsigned int i;
        unsigned int wCrc = 0xFFFF;
        for(i=0; i<num; i++)
        {
            wCrc ^= (unsigned int)(pBuf[i]);
            for (j=0; j<8; j++)
            {
                if(wCrc & 1){wCrc >>= 1; wCrc rc ^= 0xA001;}
                else
                    wCrc >>= 1;
            }
        }
        return wCrc;
    }
    
```